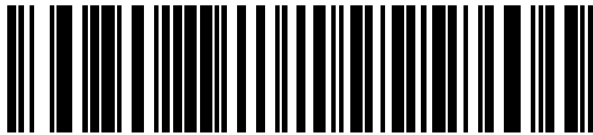

Installation

Copy the INF file to your desktop. *Note: USB CDCRAW.inf is only needed when connecting a USB Serial RAW device such as the MT20x0, otherwise use USB CDC.inf.*

Connect your barcode scanner and scan the “CDC COM Port Emulation” host barcode (or, if using RAW host, the USB RAW host barcode):



CDC COM Port Emulation

The Found New Hardware Wizard will pop up:

1. Opt to manually search for the driver by selecting “No, not this time” and then “Install from a list or specific location.”